

Termination instructions for Shielded Keystone Jacks

CAT5E 301-J2630/S **CAT6** 302-J2631/S **CAT6A** 303-J2637/C6AS


1

Strip about 2 inches of the cable jacket. Wrap the drain wire around the jacket of the cable.




2

Lay the conductors to the desired color map 568A or 568B and terminate.

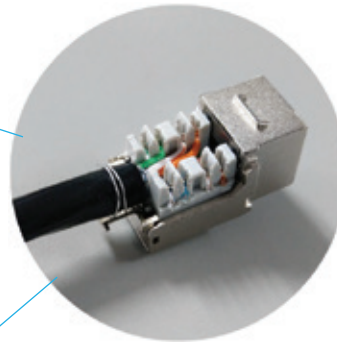

3

Make sure drain wire makes contact with the shield body when cover is installed and closed.

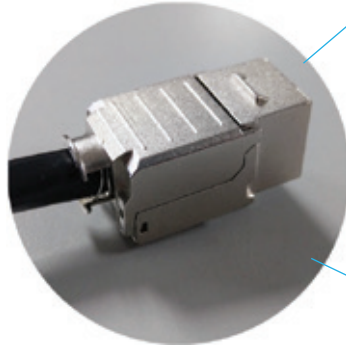

4

Use the zip tie and tighten and lock the cover to the housing



At Vertical Cable #WeHaveItAll:



Handheld Gripper
078-1039/U



Punch-Down Tools
078-1028, 078-1025



Wall Plates
304, 305, 306, 307, 308 Series